


# MANUALE - KIT 02

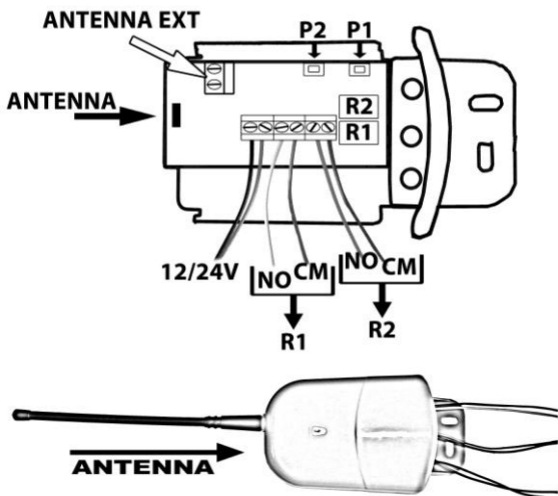

## PROGRAMMAZIONE:

Premere **P1**:

- 1 volta per programmare **R1** in modalità monostabile
- 2 volte per programmare **R2** in modalità monostabile
- 3 volte per programmare **R1** in modalità bistabile
- 4 volte per programmare **R2** in modalità bistabile

tenere premuto il tasto del radiocomando che si vuol acquisire fino a che il led inizi a lampeggiare.

## CANCELLAZIONE:

*Sono disponibili due tipi di cancellazione*


### **1. Cancellazione di un singolo codice:**

Premere il tasto **P2** per circa 2 secondi (rilasciare il tasto); il led si accenderà, premere il tasto del radiocomando che si vuole cancellare.

### **2. Cancellazione di tutti i codici acquisiti:**

Premere **P2** fino a che il led si accenda (circa 8 secondi).

# MANUAL - KIT 02

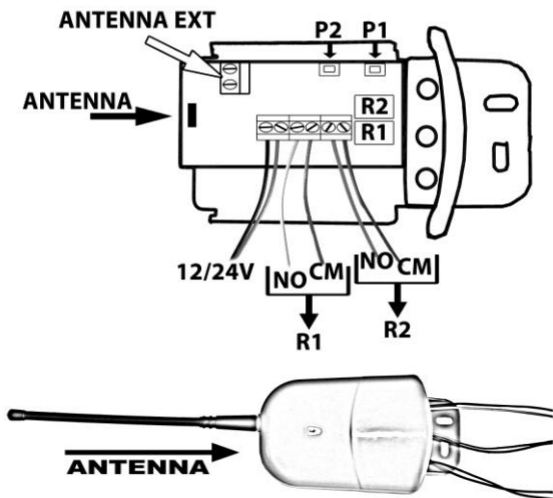

## **PROGRAMMING:**

Press the **P1**:

- 1 time to program **R1** in monostable mode
- 2 times to program **R2** in monostable mode
- 3 times to program **R1** in bistable mode
- 4 times to program **R2** in bistable mode

hold down the key of the radio remote control that you would like to acquire until the led blinks.

## **ERASING:**

*There are two ways of erasing*

### **1. Erasing a single code:**

Press **P2** for about two seconds (release the key); the LED will light up, press the key on the radio remote control that you want to delete.

### **2. Erasing all codes acquire:**

Press **P2** until the LED turns on (about 8 seconds).